

## MANUAL Mode

1. Turn ON Power Switch
2. Turn OFF Arm Switch
3. Press Mode Button to MANUAL
4. Press SAVE Button
5. Turn ON Arm Switch
6. Trigger Pulse to Fire

## MANUAL Mode Select Option

1. Turn ON Power Switch
2. Turn OFF Arm Switch
3. Press Mode Button to MANUAL
4. Press UP/DOWN Buttons to select Cue.
4. Press SAVE Button
5. Turn ON Arm Switch
6. Trigger Pulse to Fire Selected Cue.

## Pause / Stop Firing

Manual Mode N/A

Semi Auto -Release Hold Trigger. Stops firing. Reholding Trigger continues firing from when Trigger was released.

Full Auto- Secondary Pulse Stops Firing. Another Pulse reactivates firing.

Table Mode- Secondary Pulse but internal clock is running. Hold Trigger for 4 + seconds Stops firing and resets clock to zero.

Stage Mode- Release of HOLD Trigger will stop firing and not allow reentry of firing until next CUE BREAK or end of program.

## SEMI Auto Mode

1. Turn ON Power Switch
2. Turn OFF Arm Switch
3. Press Mode Button to SEMI AUTO
4. Press UP/DOWN Buttons to select delay time.
4. Press SAVE Button
5. Turn ON Arm Switch
6. Hold Fire Pulse to Fire

## FULL Auto Mode

1. Turn ON Power Switch
2. Turn OFF Arm Switch
3. Press Mode Button to FULL Auto
4. Press UP/DOWN Buttons to select delay time.
4. Press SAVE Button
5. Turn ON Arm Switch
6. Trigger Pulse to Fire

## Continuity

1. Turn OFF Arm Switch
2. Press \* Button

## Lock / Unlock

1. Push SAVE and MODE Button

## TABLE Mode

1. Turn ON Power Switch
2. Turn OFF Arm Switch
3. Press Mode Button to TABLE
4. Press SAVE Button
5. Turn ON Arm Switch
6. Trigger Pulse to Fire

## STAGE Mode

1. Turn ON Power Switch
2. Turn OFF Arm Switch
3. Press Mode Button to Stage
4. Press SAVE Button
5. Turn ON Arm Switch
6. Hold Fire Pulse to Fire

## SAVE Button

The displayed mode and settings will be saved and will default to after a power reboot.

Manual Select will not save the selected cue on a power reboot.

## Config and Options Displays

Refer to Display instructions on the Twiddle units for changes and programming.